


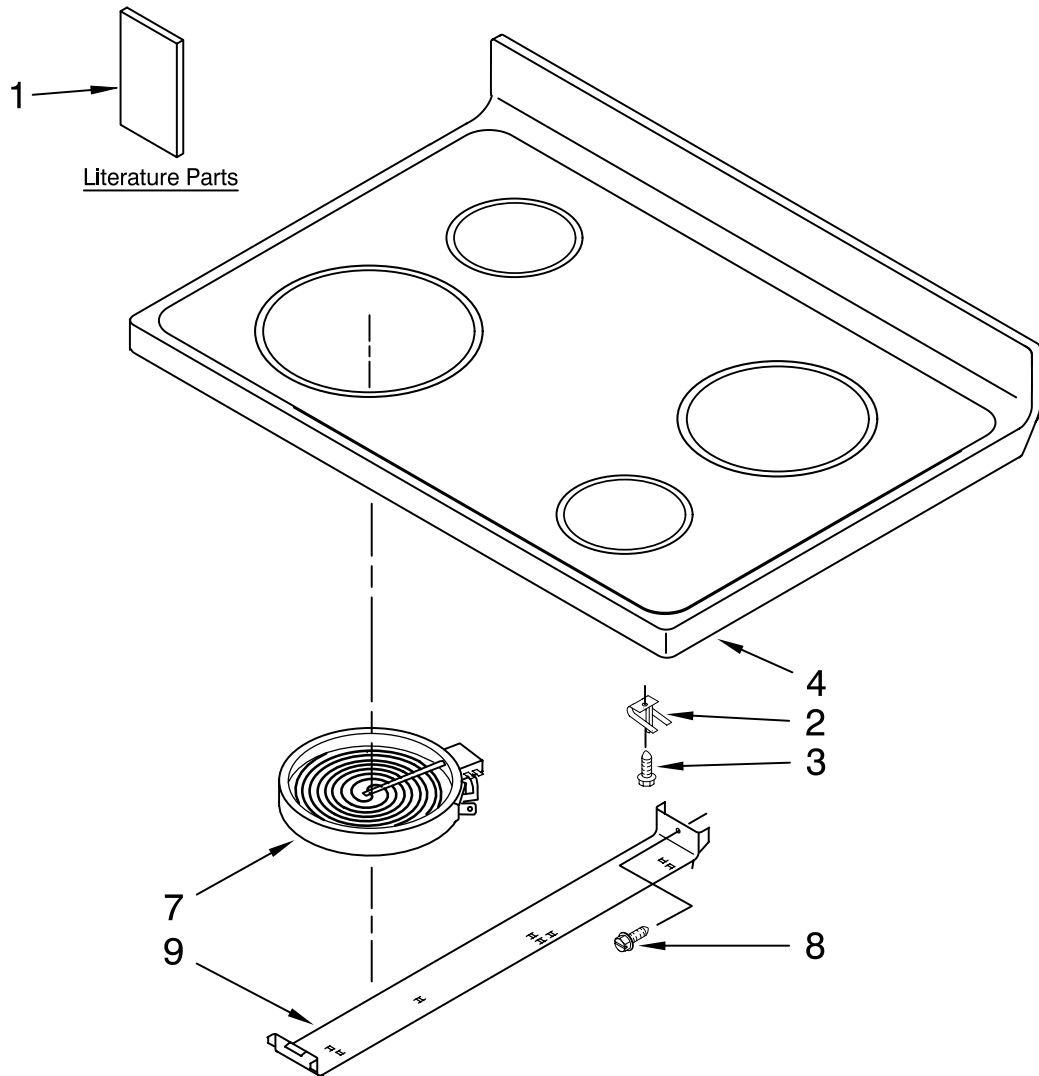

COOKTOP PARTS

For Models: RF212PXSQ1
(Designer White)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE




Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9762996	Literature Instructions Installations Template, Anti-Tip	2	W10035930	Spring, Locator	7	8523695	Element, Surface
	9757142	English/Spanish	3	3196170	Screw		8523697	1500 W - LR
	9757143	English/French	4	9763321	Cooktop White/White		8523695	2000 W - RR
	9763001	Owners Manual					8523697	1500 W - RF
	W10115596	Tech Sheet				8	3196169	Screw
	9762761	Safer Cooking Tips				9	3196454	Bracket, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF212PXSQ1
(Designer White)

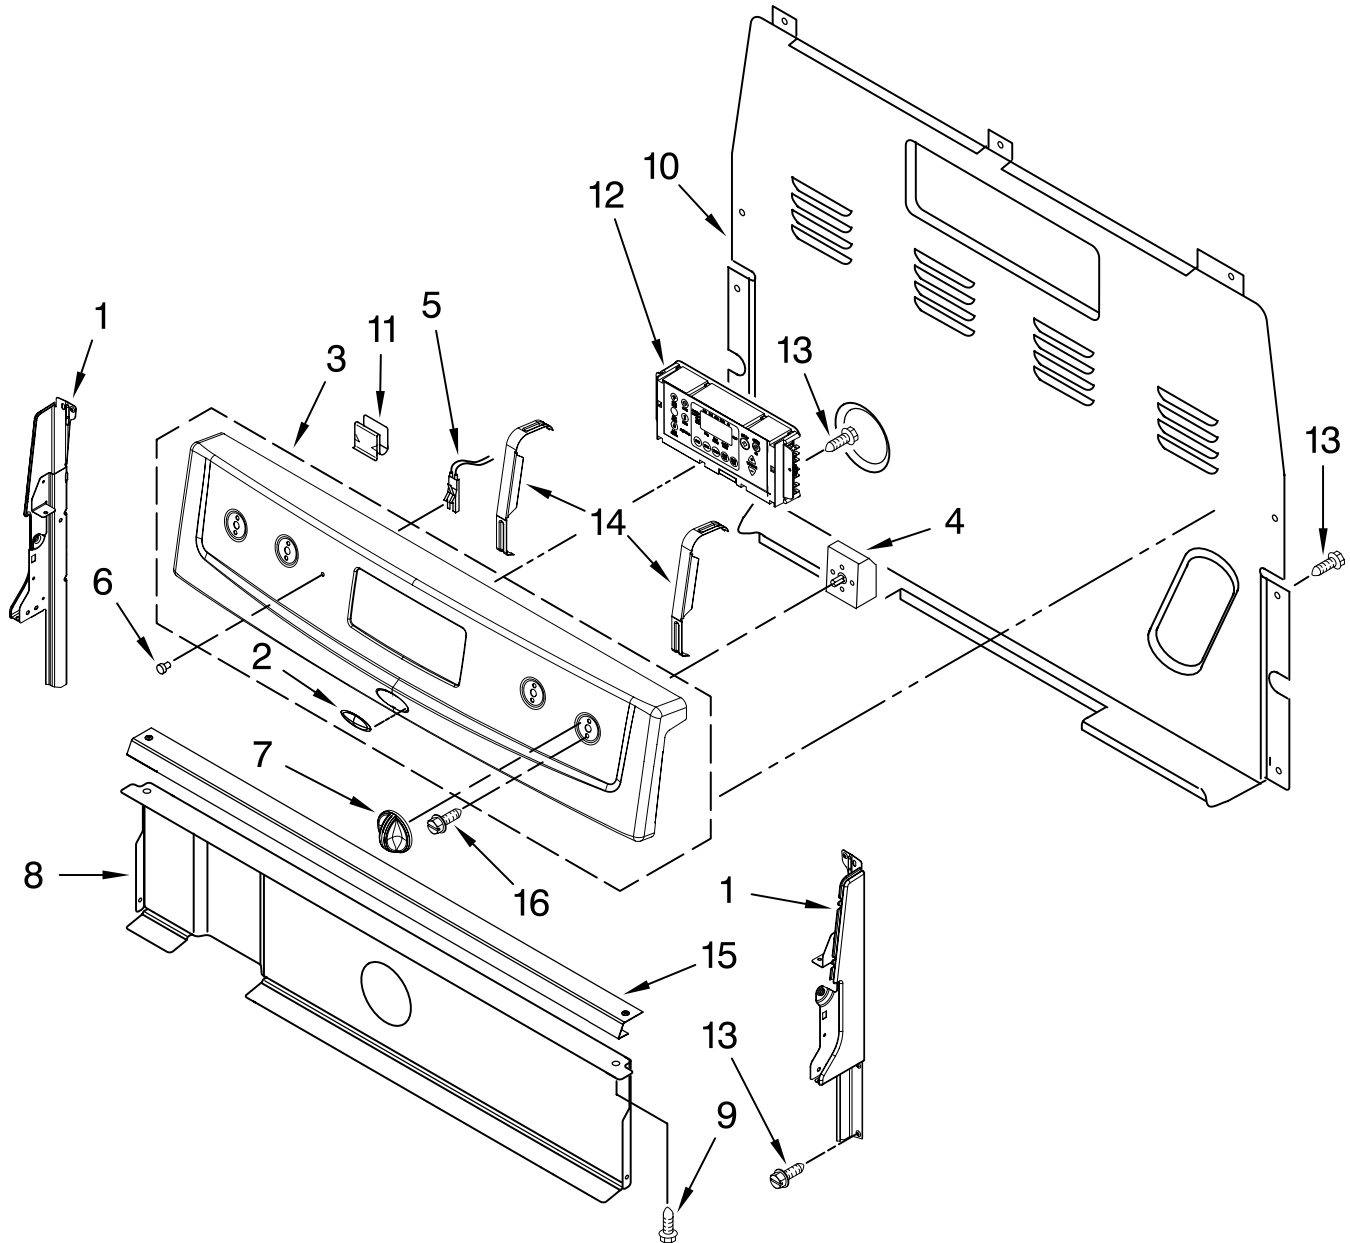

Illus. No.	Part No.	DESCRIPTION
1	W10009040	Endcap White Left Hand
	W10009050	White Right Hand
2	9757609	Nameplate
3		Panel, Console
	9762018	White
4		Switch, Infinite
	3148953	Left Front
	3148952	Left Rear
	3148953	Right Rear
	3148952	Right Front


Illus. No.	Part No.	DESCRIPTION
5		Light, Indicator
	8523265	Surface Unit (2)
6	3196068	Lens, Light (3)
7		Knob, Infinite (4)
	9761962	White
8	8523280	Shield, Heat
9	3196166	Screw

Illus. No.	Part No.	DESCRIPTION
10	8272473	Cover, Upper
11	8273564	Clip
12		Control, Range
	W10108280	White
13	3196178	Screw
14	9762078	Brkt-Mntg, EOC
15	9762095	Brkt-Mntg, Console
16	3400882	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF212PXSQ1
(Designer White)

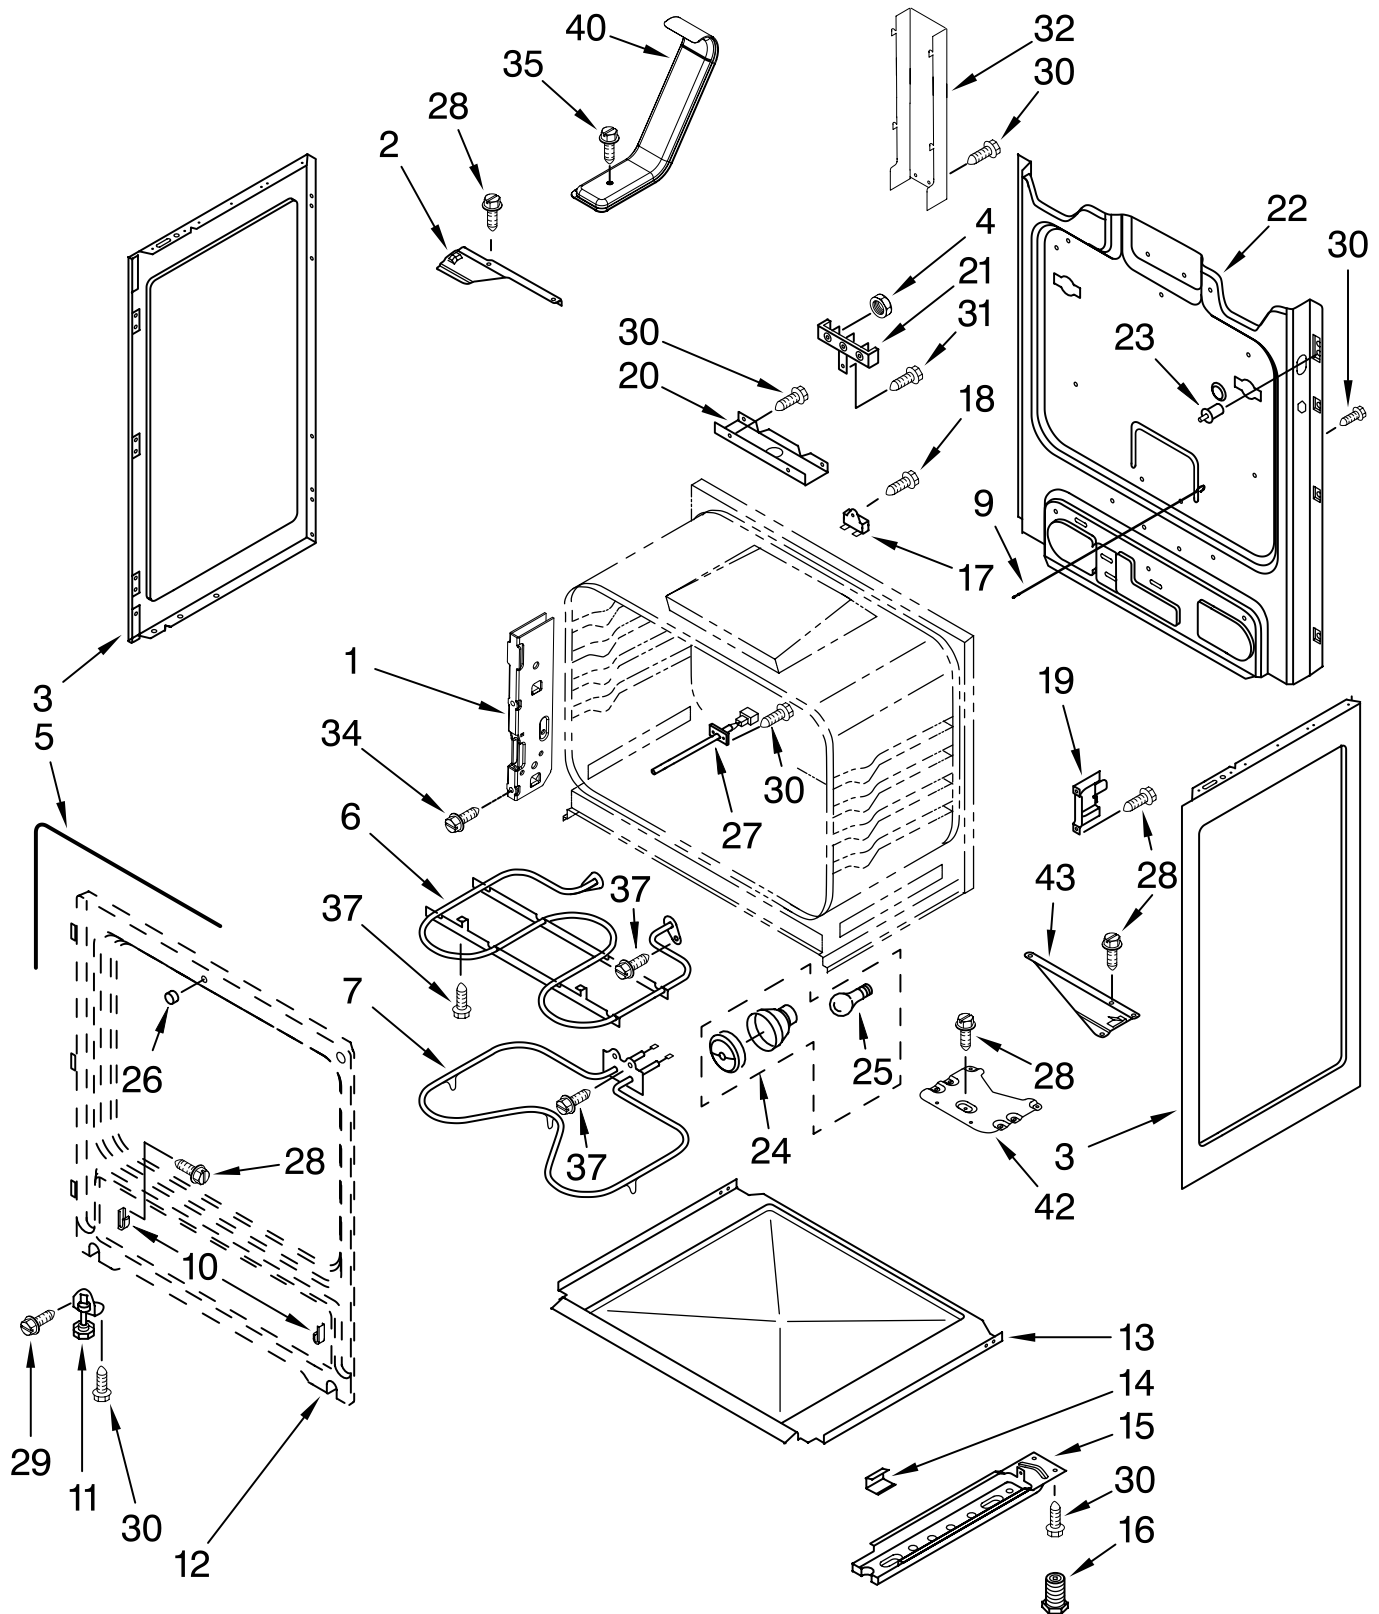

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF212PXSQ1
(Designer White)


Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt – Mounting
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White–Textured
4	112432	Nut
5	3186152	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
9	9757239	Rod – Dr Switch
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Not Serviced)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	W10058460	Foot, Rear (2)
17	3196548	Thermal, Fuse
18	3196172	Screw
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	9758701	Spacer – Door
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
32	9758283	Cover, Box
34	W10031780	Screw
35	3196566	Screw
37	3196174	Screw
40	9761300	Flue
42	3195736	Support, Front (2)
43	3195987	Support, Corner RR

INSULATION

8273263 Insulation, Wrap
8272611 Insulation, Back
8272613 Insulation, Vent

DRAWER & BROILER PARTS

For Models: RF212PXSQ1
(Designer White)

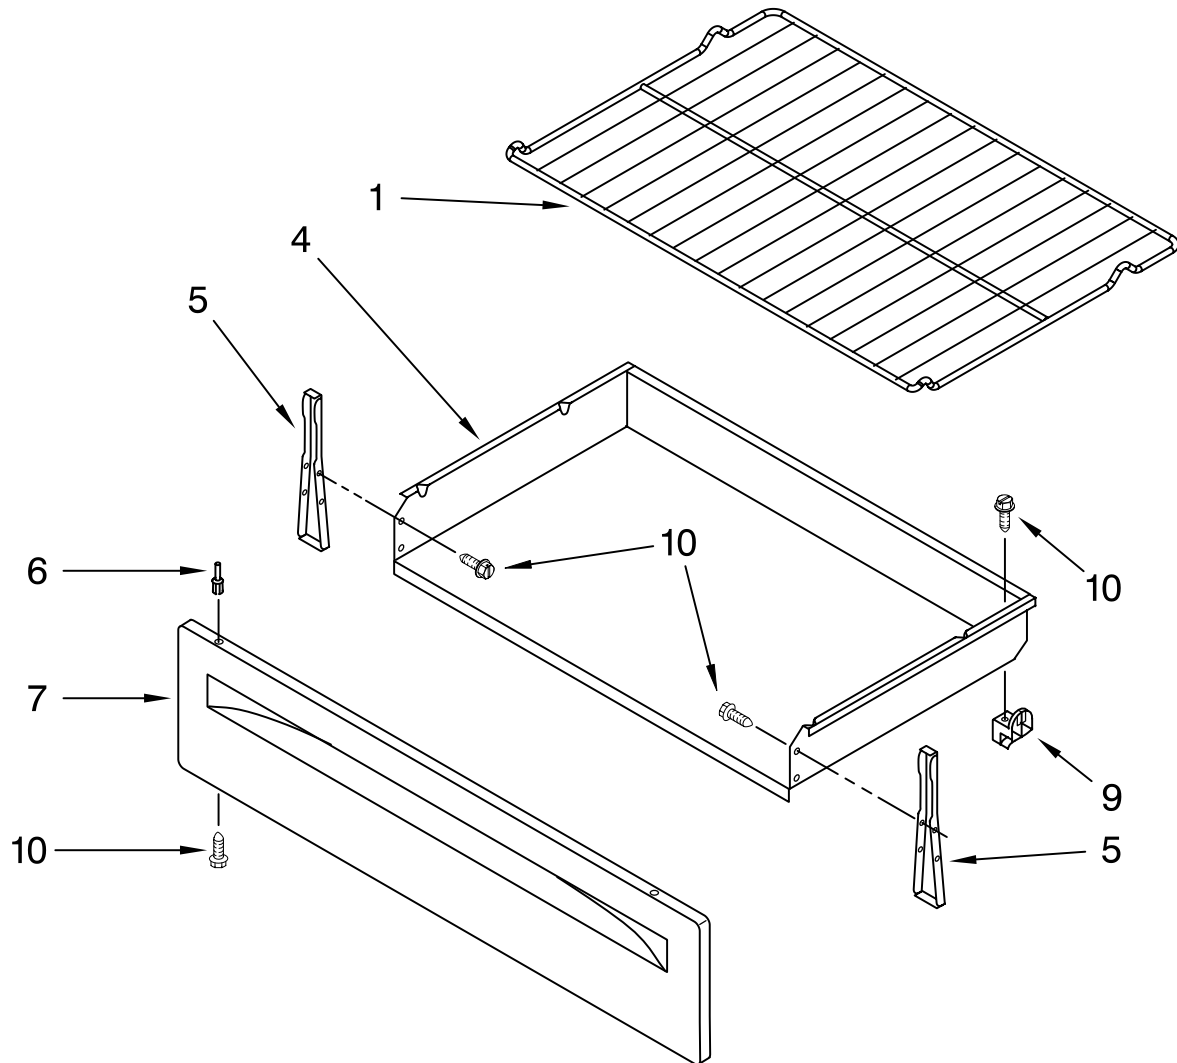


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
7	3196814	White Panel, Drawer Frnt
9	8053339	White Glide, Drawer (2)
10	8053334	Glide, Drawer (2)
	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF212PXSQ1
(Designer White)

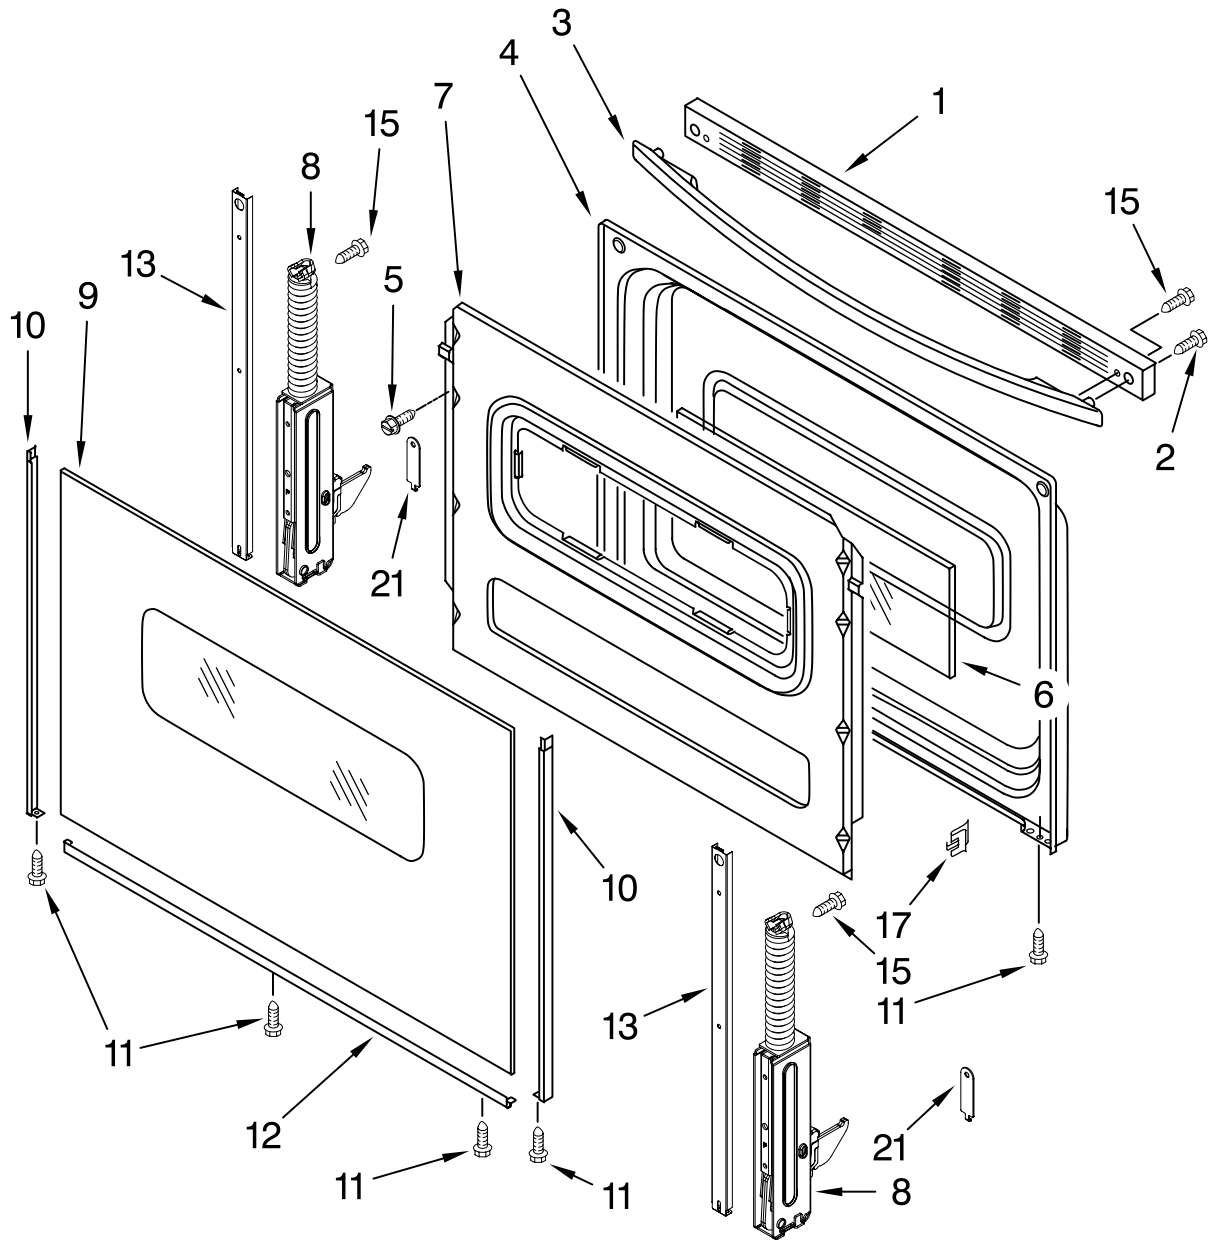

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top White
2	3196164	Screw
3	9761982	Handle, Door White
4	9761340	Liner, Door
5	W10031790	Screw

Illus. No.	Part No.	DESCRIPTION
6	9758163	Window, Inner
7	9761500	Retainer, Insul.
8	9761494	Hinge, Door (2)
9	9762476	Glass, Outer White
10	8523172	Trim, Side White Left Hand
	8523166	White Right Hand

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12	8523175	Trim, Lower White
13	W10113759	Strap, Door
15	W10031780	Screw
17	3196025	Clip, Glass
21	9761517	Clip, Dr Mntg

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF212PXSQ1
(Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black	12 Ga. 150° c
242821	Wire, Blue	14 Ga. 150°c
242822	Wire, Brown	14 Ga. 150°c
242830	Wire, Brown	14 Ga. 200°c
242823	Wire, Green	14 Ga. 150°c
242824	Wire, Orange	14 Ga. 150°c
242825	Wire, Red	14 Ga. 150°c
242831	Wire, Red	14 Ga. 200°c
242827	Wire, Yellow	14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass
4396923	Pan, Broiler

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

9762959	Harness, Wire (Cooktop Left)
9762958	Harness, Wire (Cooktop Right)
W10083650	Harness, Wire (Sensor/Dr Switch)
8523279	Wire, Ground
3196154	Screw
W10083550	Harness, Wire (Main)
313660	Clip, Wire Ground
3196173	Screw
8524114	Relief, Strain
8524132	Shield, Wiring
3196174	Screw (Grnd Wire / Back)

Miscellaneous

814381	Pin Kit-Dr Removal
--------	--------------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST